ASRock Industrial

IMB-X1316

User Manual

Version 1.4

Updated August 12, 2025

Copyright©2025 ASRockInd INC. All rights reserved.

Version 1.0
Published November, 2023
Copyright©2025 ASRockInd INC. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRockInd Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRockInd. ASRockInd assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRockInd does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRockInd, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRockInd has been advised of the possibility of such damages arising from any defect or error in the documentation or product.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

The terms HDMI® and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

HIGH-DEFINITION MULTIMEDIA INTERFACE

WARNING

THIS PRODUCT CONTAINS A BUTTOON BATTERY
If swallowed, a button battery can cause serious injury or death.
Please keep batteries out of sight or reach of children.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

"Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate"

AUSTRALIA ONLY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage caused by our goods. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASRockInd Tel : +886-2-28965588 ext.123 (Standard International call charges apply)

ASRockInd follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASRockInd product is in line with global environmental regulations. In addition, ASRockInd disclose the relevant information based on regulation requirements.

DO NOT throw the motherboard in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

Button Battery Safety Notice

⚠WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: CR2032
- Battery voltage: 3V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- This product contains an irreplaceable battery.
- This icon indicates that a swallowed button battery can cause serious injury or death. Please keep batteries out of sight or reach of children.

Contents

Chapter 1 Introduction **1**

1.1 Package Contents 1

1.2 Specifications 2

1.3 Motherboard Layout 5

1.4 I/O Panel 8

1.5 Block Diagram 10

Chapter 2 Installation **11**

2.1 Screw Holes 11

2.2 Pre-installation Precautions 11

2.3 Installation of Memory Modules (LONG-DIMM) 12

2.4 Expansion Slots 14

2.5 Jumpers Setup 16

2.6 Onboard Headers and Connectors 20

Chapter 3 UEFI SETUP UTILITY **28**

3.1 Introduction 28

3.1.1 Entering BIOS Setup 28

3.1.2 UEFI Menu Bar 29

3.1.3 Navigation Keys 30

3.2 Main Screen 31

3.3 Advanced Screen 32

3.3.1 CPU Configuration 33

3.3.2 Chipset Configuration 36

3.3.3 Storage Configuration 40
3.3.4 Super IO Configuration 42
3.3.5 AMT Configuration 44
3.3.6 ACPI Configuration 46
3.3.7 USB Configuration 47
3.3.8 Trusted Computing 48
3.3.9 Thunderbolt (TM) Configuration 50
3.4 Hardware Health Event Monitoring Screen 51
3.5 Security Screen 53
3.6 Boot Screen 54
3.7 Exit Screen 55

Chapter 1 Introduction

Thank you for purchasing ASRockInd ***IMB-X1316*** motherboard, a reliable motherboard produced under ASRockInd's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRockInd's commitment to quality and endurance.
In this manual, chapter 1 and 2 contain introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 contains the configuration guide to BIOS setup.

Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRockInd website without further notice. You may find the latest CPU support lists on ASRockInd website as well.
ASRockInd website https://www.asrockind.com/IMB-X1316
If you require technical support related to this motherboard, please visit our website for specific information about the model you are using.
https://www.asrockind.com/zh-tw/technical-support

1.1 Package Contents

ASRockInd ***IMB-X1316*** Motherboard (Micro-ATX (9.6-in x 9.6-in x 1.4-in, 24.4 cm x 24.4 cm x 3.6 cm))
ASRockInd ***IMB-X1316*** Jumper Setting Instruction

Gift Package:
2 x SATA Data Cable
1 x I/O Shield
4 x SCREW M2*2, D=5

Bulk Package:
1 x I/O Shield
4 x SCREW M2*2, D=5

1.2 Specifications

Form Factor	Dimensions	Micro-ATX (9.6-in x 9.6-in x 1.4-in, 24.4 cm x 24.4 cm x 3.6 cm)
Processor System	CPU	Intel® Core™ Processor Series 2 (Bartlett Lake-S) and 14th/13th/12th Gen (Raptor Lake-S Refresh/Raptor Lake-S/Alder Lake-S) Core™ Processors, up to 125W
	Chipset	Intel® W680
	Socket	LGA 1700
	BIOS	AMI SPI 256 Mbit
Memory	Technology	Dual Channel ECC/non-ECC DDR5 4400/5600 MHz* *Actual memory frequency depends on the CPU types and DRAM modules, for more information refer to https://www.asrockind.com/en-gb/index.php?route=newsblog/%20faq&faq_id=90%20technical%20FAQ *For DDR5 5600 support refer to memory support list
	Capacity	192GB (48GB per DIMM)
	Socket	4 x 288-pin Long-DIMM
Graphics	Controller	Intel® UHD Graphics
	HDMI	2 x HDMI 2.0b Max resolution up to 4096 x 2160@60Hz
	DisplayPort	DisplayPort 1.4a, DP++ Max resolution up to 4096x2160@60Hz
	LVDS	Dual channel 24 bit up to 1920x1200@60Hz
	Multi Display	Quad Display
Expansion Slot	PCIe	2 x PCIe Gen5 Slots (PCIE1/PCIE4: single at x16 (PCIE1); dual at x8 (PCIE1)/x8 (PCIE4)) (PCIE1: support riser card x8/x8) 2 x PCIe x4 (Gen4)* *If using PCIE x8/x16 card on PCIE2 slot, M.2 Key M2 (M2_M2) is limited to install.
	M.2	1 x M.2 (Key E, 2230) with PCIe Gen3 x1, USB 2.0 and CNVio/CNVio2 for Wireless 1 x M.2 (Key B, 3042/3052) with PCIe Gen3 x1, USB 3.2 Gen1, USB 2.0 and SIM for 4G/5G
	SIM Socket	1 x SIM socket connected to M.2 key B
Audio	Interface	Realtek ALC897 HD, High Definition Audio. Line-In, Line-Out, Mic-In
Ethernet	Controller/ Speed	LAN1: Intel® I226LM with 10/100/1000/2500 Mbps, supports vPro LAN2: Intel® I210AT with 10/100/1000 Mbps
	Controller	2 x RJ-45

Rear I/O	HDMI	2 x HDMI 2.0b
	DisplayPort	1 x DP++
	Ethernet	1 x 2.5 Gigabit LAN 1 x 1 Gigabit LAN
	USB	2 x USB 2.0 5 x USB 3.2 Gen2 1 x USB 3.2 Gen2 x2 (Type-C, 5V/3A)
	Audio	3 (Line-In/Line-Out/Mic-In)
	COM	COM1 (RS-232/422/485)
Internal Connector	USB	2 x USB 3.2 Gen2 vertical connector
	COM	COM2 (RS-232/422/485) COM3, COM4, COM5, COM6 (RS-232)
	Parallel	1 (shared with GPIO)
	GPIO	8 x GPI, 8 x GPO (shared with LPT header)
	LVDS	1
	Speaker Header	1
	PS/2	1 x PS/2 header
	Thunderbolt header	1 (only use with PCIE3)
Storage	M.2	1 x M.2 (Key M, 2242/2280/25110) with PCIe Gen4 x4 for SSD 1 x M.2 (Key M, 2242/2280) with PCIe Gen3 x4 for SSD
	SATA	8 x SATA3
	RAID	Intel® VMD RAID 0/1/5/10 **supported by identical interface (PCIE or SATA) PCIE interface: M.2 Key B + M.2 Key M1/2 or 2*M.2 Key M SATA interface: SATA port
Security	TPM	TPM 2.0 onboard IC
Watchdog Timer	Output	From Super I/O to drag RESETCON#
	Interval	256 Segments, 0, 1, 2, ...255 sec
Power Requirements	Input PWR	ATX PWR (24+8-pin)
	Power On	AT/ATX supported -AT: Directly PWR on as power input ready -ATX: Press button to PWR on after power input ready

Environment	Operating Temp	-20°C ~ 70°C
	Storage Temp	-40° C ~ 85° C
	Operating Humidity	5% ~ 90%
	Storage Humidity	5% ~ 90%

1.3 Motherboard Layout

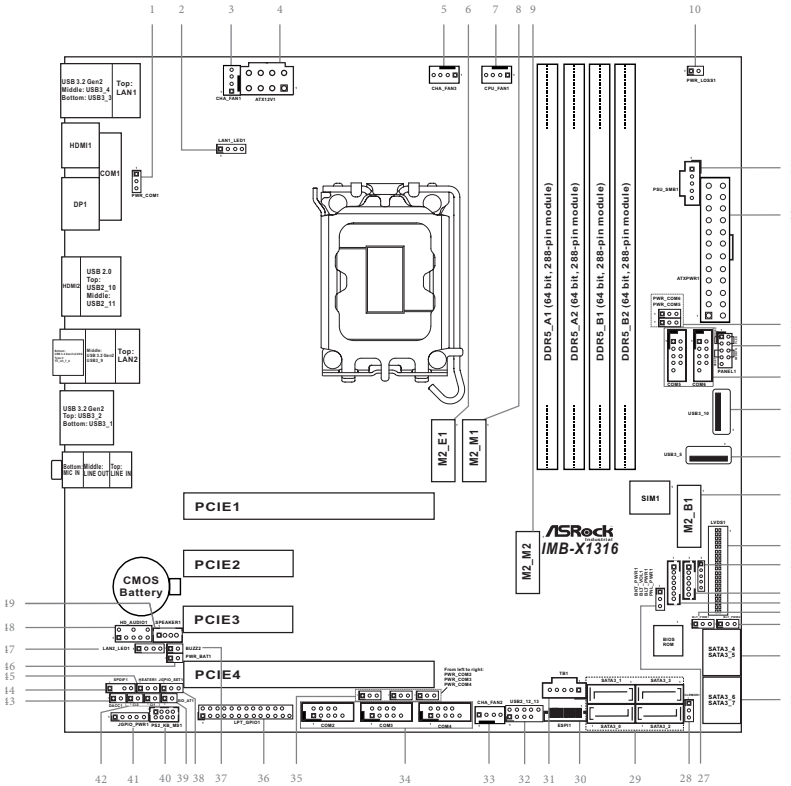

1 : COM Port Pin9 PWR Setting Jumper
(PWR_COM1 (For COM Port1))
2 : LAN LED Header
LAN1_LED1 (For LAN1 Port)
3 : Chassis FAN Connector (+12V) (CHA_FAN1)
4 : 8-Pin ATX 12V Power Connector (ATX12V1)
5 : Chassis FAN Connector (+12V) (CHA_FAN3)
6 : M.2 Key-E Socket (M2_E1)
7 : CPU FAN Connector (+12V) (CPU_FAN1)
8 : M.2 Key-M Socket (M2_M1)
9 : M.2 Key-M Socket (M2_M2)
10 : Power Loss Header (PWR_LOSS1)
11 : PSU_SMB1
12 : 24-pin ATX Power Input Connector (ATXPWR1)
13 : COM Port Pin9 PWR Setting Jumpers
PWR_COM5 (For COM Port5)
PWR_COM6 (For COM Port6)
14 : System Panel Header (PANEL1)
15 : COM Port Headers (COM5, COM6 (RS232))
16 : USB 3.2 Gen2 Connector (Type-A) (USB3_10)
17 : USB 3.2 Gen2 Connector (Type-A) (USB3_5)
18 : M.2 Key-B Socket (M2_B1)
19 : LVDS Panel Connector (LVDS1)
20 : Panel Power Select (PNL_PWR1)
21 : Inverter Power Control Wafer (BLT_PWR1)
22 : Backlight Volume Control (BLT_VOL1)
23 : Brightness Control Mode (BLT_PWM1)
24 : Brightness Control Voltage Mode (BLT_PWM2)
25 : SATA3 Connectors (SATA3_4, SATA3_5)
26 : SATA3 Connectors (SATA3_6, SATA3_7)
27 : Backlight Power Select (LCD_BLT_VCC) (BKT_PWR1)
28 : Clear CMOS Header (CLRMOS1)
29 : SATA3 Connectors (SATA3_0~SATA3_4)
30 : ESPI Header (ESPI1)
31 : Thunderbolt AIC Connector (TB1)
32 : USB 2.0 Header (USB2_12_13)
33 : Chassis FAN Connector (+12V) (CHA_FAN2)
34 : COM Port Headers
COM2 (RS232/422/485)*
COM3, COM4 (RS232)

35 : COM Port Pin9 PWR Setting Jumpers
PWR_COM2 (For COM Port2)
PWR_COM3 (For COM Port3)
PWR_COM4 (For COM Port4)
36 : Printer Port/GPIO Header (LPT_GPIO1)
37 : Buzzer Header (BUZZ2)
38 : Digital Input/Output Power Select (JGPIO_SET1)
39 : ATX/AT Mode Jumper (SIO_AT1)
40 : PS/2 Keyboard/Mouse Header (PS2_KB_MS1)
41 : Digital Input/Output Power Select (JGPIOPWR) (JGPIO_PWR1)
42 : Chassis Intrusion Headers (CI1, CI2)
43 : DACC Jumper (DACC1)
44 : SPDIF Header (SPDIF1)
45 : HEATER Header (HEATER1)
46 : PWR_BAT1
47 : LAN LED Header
LAN2_LED1 (For LAN2 Port)
48 : Front Panel Audio Header (HD_AUDIO1)
49 : 3W Audio Output Wafer (SPEAKER1)

1.4 I/O Panel

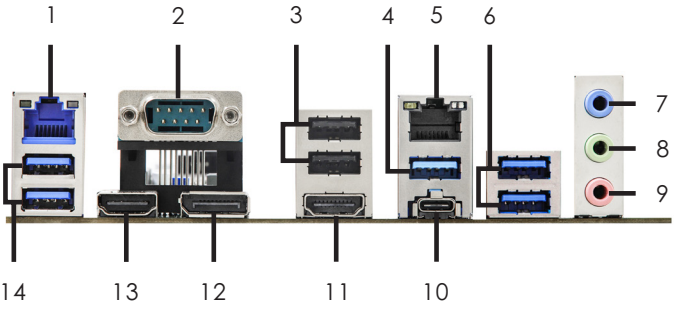

1 RJ45 LAN Port (LAN1)* (supports vPro)
2 COM Port (COM1) (RS232/422/485)**
3 USB 2.0 Ports (USB2_10_11)
4 USB 3.2 Gen2 Port (USB3_9)
5 RJ45 LAN Port (LAN2)***
6 USB 3.2 Gen2 Ports (USB3_1_2)
7 Audio Jack：Blue - Line In
8 Audio Jack：Green - Line Out
9 Audio Jack：Pink - Mic In
10 USB 3.2 Gen2 x2 20G Type C Port (TC_U3_7_8)
11 HDMI Port (HDMI2)
12 DisplayPort (DP1)
13 HDMI Port (HDMI1)
14 USB 3.2 Gen2 Ports (USB3_3_4)

* There are two LEDs next to the LAN1 port. Please refer to the table below for the LAN1 port LED indications.

LAN1 Port LED Indications

Activity/Link LED

Status	Description
Off	No Link
Blinking	Data Activity
On	Link

SPEED LED

Status	Description
Off	10Mbps connection
Orange	100Mbps/1Gbp connection
Green	2.5Gbps connection

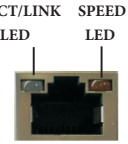

LAN1 Port

** This motherboard supports RS232/422/485 on COM1 port. Please refer to the table below for the pin definition. In addition, COM1 port (RS232/422/485) can be adjusted in BIOS setup utility > Advanced Screen > Super IO Configuration. You may refer to our user manual for details.

COM1 Port Pin Definition

Pin	RS232	RS422	RS485
1	DCD	TX-	RTX-
2	RXD	TX+	RTX+
3	TXD	RX+	N/A
4	DTR	RX-	N/A
5	GND	GND	GND
6	DSR	N/A	N/A
7	RTS	N/A	N/A
8	CTS	N/A	N/A
9	PWR	PWR	PWR

*** There are two LEDs next to the LAN2 port. Please refer to the table below for the LAN2 port LED indications.

LAN2 Port LED Indications

Activity/Link LED

Status	Description
Off	No Link
Blinking	Data Activity
On	Link

SPEED LED

Status	Description
Off	10Mbps connection
Orange	100Mbpsconnection
Green	1Gbp connection



LAN2 Port

1.5 Block Diagram

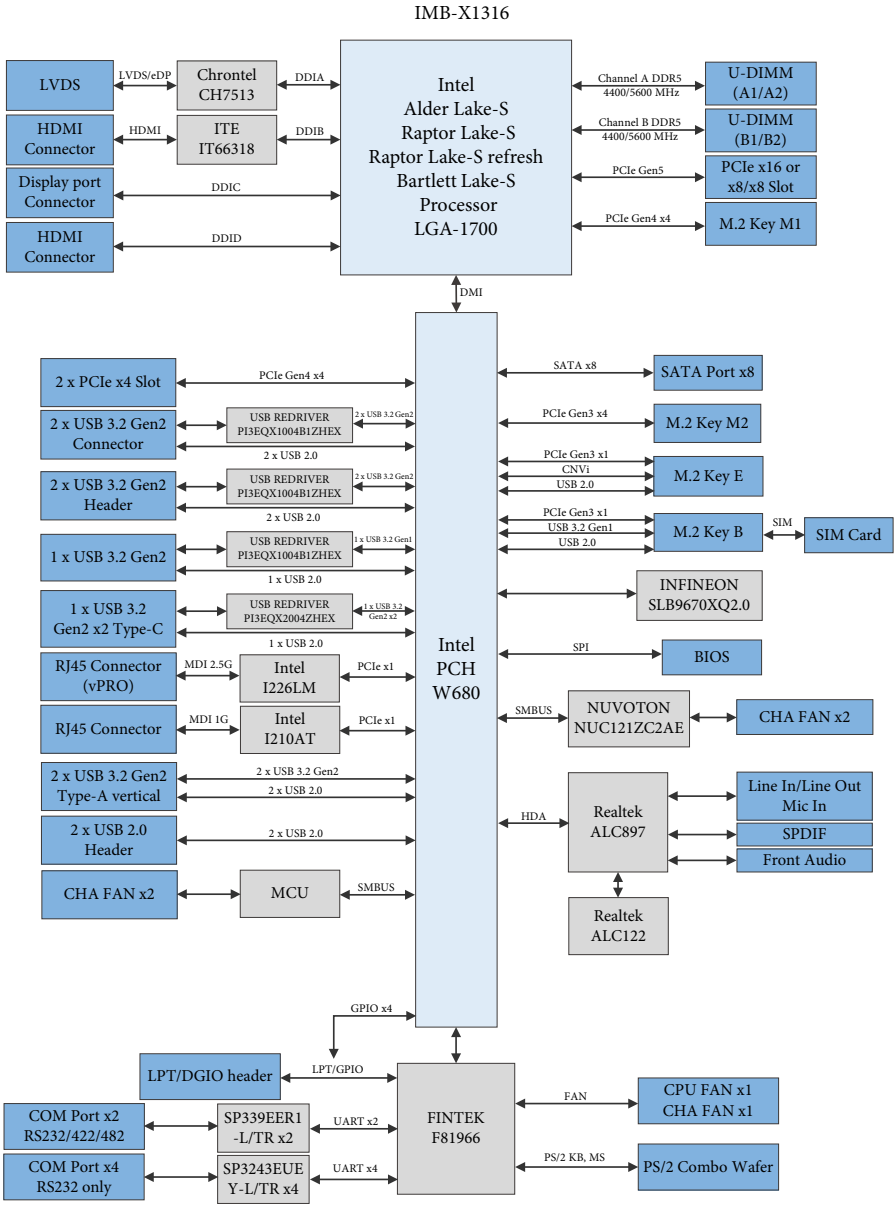

Chapter 2 Installation

This is a Micro-ATX (9.6-in x 9.6-in x 1.4-in, 24.4 cm x 24.4 cm x 3.6 cm) form factor motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.

Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

2.1 Screw Holes

Place screws into the holes to secure the motherboard to the chassis.

Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component.
5. Heatsink (The thermal solution of whole system needs to be designed additionally.)

Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.3 Installation of Memory Modules (LONG-DIMM)

IMB-X1316 provides four 288-pin DDR5 (Double Data Rate 5) Long-DIMM slots, and supports ECC/non-ECC Memory Technology.

1. *For dual channel configuration, you always need to install identical (the same brand, speed, size and chip-type) DDR5 DIMM pairs.*
2. *It is unable to activate Quad Channel Memory Technology with only one memory module installed.*
3. *It is not allowed to install a DDR, DDR2, DDR3 or DDR4 memory module into a DDR5 slot; otherwise, this motherboard and DIMM may be damaged.*

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot in the incorrect orientation.

Recommended Memory Configuration

Priority	DDR5_A1	DDR5_A2	DDR5_B1	DDR5_B2
1		Populated		Populated
2	Populated	Populated	Populated	Populated

1. Open the DIMM slot latches.

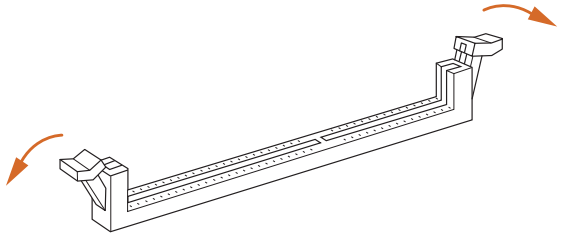

2. Align the notch. Carefully press down until the DIMM slides into the slot.

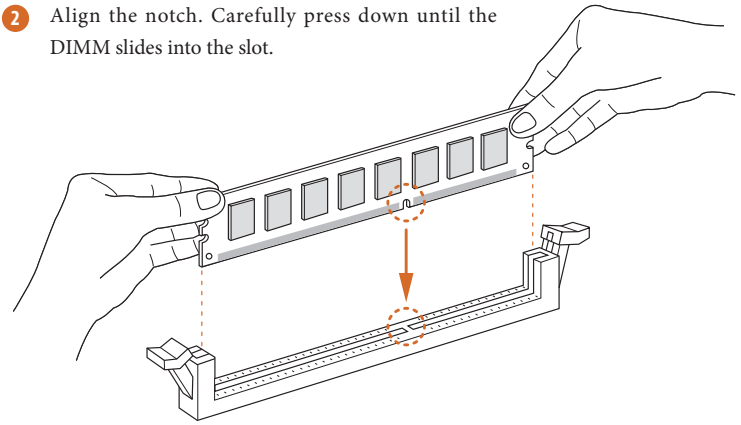

3. The latches snap back into place.

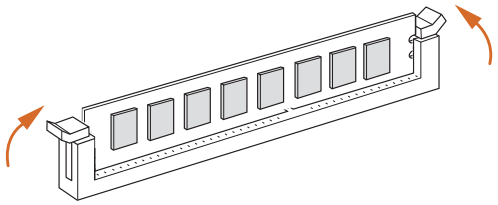

2.4 Expansion Slots

There are four PCI Express slots, four M.2 sockets and one SIM socket on this motherboard.

PCIE slot: 2 x PCIe Gen5 Slots (PCIE1/PCIE4: single at x16 (PCIE1); dual at x8 (PCIE1) / x8 (PCIE4))(PCIE1: Support riser card x8/x8)
2 x PCIe x4 (Gen4)*
*If using PCIE x8/x16 card on PCIE2 slot, M.2 Key M2 (M2_M2) is limited to install.

M.2 sockets: 1 x M.2 (Key E, 2230) with PCIe Gen3 x1, USB 2.0 and CNVio/CNVio2 for Wireless
1 x M.2 (Key B, 3042/3052) with PCIe Gen3 x1, USB 3.2 Gen1, USB 2.0 and SIM for 4G/5G
1 x M.2 (Key M, 2242/2280/25110) with PCIe Gen4 x4 for SSD
1 x M.2 (Key M, 2242/2280) with PCIe Gen3 x4 for SSD

SIM socket: 1x SIM socket connected to M.2 key B

M.2 Key-E Socket (M2_E1)

Pin	Signal Name	Signal Name	Pin
1	GND	+3VSB	2
3	USB_D+	+3VSB	4
5	USB_D-	NA	6
7	GND	NA	8
9	CNV_WGR_D1-	CNV_RF_RESET	10
11	CNV_WGR_D1+	NA	12
13	GND	MODEM_CLKREQ	14
15	CNV_WGR_D0-	NA	16
17	CNV_WGR_D0+	GND	18
19	GND	NA	20
21	CNV_WGR_CLK-	CNV_BRI_RSP	22
23	CNV_WGR_CLK+		
33	GND	CNV_BGI_DT	32
35	PETp	CNV_RGI_RSP	34
37	PETn	CNV_BRI_DT	36
39	GND	NA	38
41	PERp	NA	40
43	PERn	NA	42
45	GND	NA	44
47	PEFCLKp	NA	46
49	PEFCLKn	NA	48
51	GND	SUSCLK	50
53	CLKREQ#	PERST0#	52
55	WAKE#	W_DISABLE1#	54
57	GND	W_DISABLE2#	56
59	CNV_WT_D1-	SMB_DATA	58
61	CNV_WT_D1+	SMB_CLK	60
63	GND	NA	62
65	CNV_WT_D0-	CLKIN_XTAL_LCP	64
67	CNV_WT_D0+	NA	66
69	GND	NA	68
71	CNV_WT_CLK-	NA	70
73	CNV_WT_CLK+	+3VSB	72
75	GND	+3VSB	74

M.2 Key-M Socket (M2_M1)

Pin	Signal Name	Signal Name	Pin
1	GND	+3.3V	2
3	GND	+3.3V	4
5	PERn3	NA	6
7	PERp3	NA	8
9	GND	LED	10
11	PETn3	+3.3V	12
13	PETp3	+3.3V	14
15	GND	+3.3V	16
17	PERn2	+3.3V	18
19	PERp2	NA	20
21	GND	NA	22
23	PETn2	NA	24
25	PETp2	NA	26
27	GND	NA	28
29	PERn1	NA	30
31	PERp1	NA	32
33	GND	NA	34
35	PETn1	NA	36
37	PETp1	DEVSLP	38
39	GND	SMB_CLK	40
41	PERn0	SMB_DATA	42
43	PERp0	NA	44
45	GND	NA	46
47	PETn0	NA	48
49	PETP0	PERST#	50
51	GND	CLKREQ#	52
53	PEFCLKn	WAKE#	54
55	PEFCLKp	NA	56
57	GND	NA	58
67	NA	NA	68
69	PEDET	+3.3V	70
71	GND	+3.3V	72
73	GND	+3.3V	74
75	GND		

M.2 Key-M Socket (M2_M2)

Pin	Signal Name	Signal Name	Pin
1	GND	+3.3V	2
3	GND	+3.3V	4
5	PERn3	NA	6
7	PERp3	NA	8
9	GND	LED	10
11	PETn3	+3.3V	12
13	PETp3	+3.3V	14
15	GND	+3.3V	16
17	PERn2	+3.3V	18
19	PERp2	NA	20
21	GND	NA	22
23	PETn2	NA	24
25	PETp2	NA	26
27	GND	NA	28
29	PERn1	NA	30
31	PERp1	NA	32
33	GND	NA	34
35	PETn1	NA	36
37	PETp1	DEVSLP	38
39	GND	SMB_CLK	40
41	PERn0	SMB_DATA	42
43	PERp0	NA	44
45	GND	NA	46
47	PETn0	NA	48
49	PETP0	PERST#	50
51	GND	CLKREQ#	52
53	PEFCLKn	WAKE#	54
55	PEFCLKp	NA	56
57	GND	NA	58
67	NA	NA	68
69	PEDET	+3.3V	70
71	GND	+3.3V	72
73	GND	+3.3V	74
75	GND		

M.2 Key-B Socket (M2_B1)

Pin	Signal Name	Signal Name	Pin
1	NA	+3.3V	2
3	GND	+3.3V	4
5	GND	FuLL_Card_Power_off	6
7	USB_D+	W_DISABLE	8
9	USB_D-	WWAN_LED#	10
11	GND		
		NA	20
21	GND	NA	22
23	NA	NA	24
25	NA	NA	26
27	GND	NA	28
29	USB3_RX-	UIM_RESET	30
31	USB3_RX+	UIM_CLK	32
33	GND	UIM_DATA	34
35	USB3_TX-	UIM_PWR	36
37	USB3_TX+	NA	38
39	GND	NA	40
41	PERn0	NA	42
43	PERp0	NA	44
45	GND	NA	46
47	PETn0	NA	48
49	PETP0	PERST#	50
51	GND	CLKREQ#	52
53	PEFCLKn	WAKE#	54
55	PEFCLKp	NA	56
57	GND	NA	58
59	NA	NA	60
61	NA	NA	62
63	NA	NA	64
65	NA	NA	66
67	NA	NA	68
69	NA	+3.3V	70
71	GND	+3.3V	72
73	GND	+3.3V	74
75	NA		

2.5 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is "Short." If no jumper cap is placed on pins, the jumper is "Open." The illustration shows a 3-pin jumper whose pin1 and pin2 are "Short" when jumper cap is placed on these 2 pins.

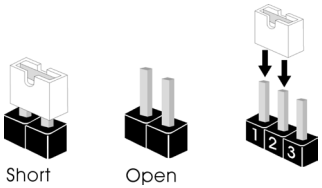

COM Port Pin9 PWR Setting Jumpers

(3-pin PWR_COM1 (For COM Port1))
(see p. 5, No. 1)

(3-pin PWR_COM5 (For COM Port5),
PWR_COM6 (For COM Port6))
(see p. 5, No. 13)

(3-pin PWR_COM2 (For COM Port2),
PWR_COM3 (For COM Port3)
PWR_COM4 (For COM Port4))
(see p. 5, No. 35)

Setting	Description
1-2	+5V (Default)
2-3	+12V

The maximum current for per port is 1A, and the power supply is either 5V or 12V. Use the jumpers to set the power for COM port pin 9.

PWR Loss Header

(2-pin PWR_LOSS1)
(see p. 5, No. 10)

Setting	Description
Open	No Power Loss
Short	Power Loss (Default)

This header provides ATX power supply ATX+5VSB dummy load for quick power loss.

Panel Power Select

(5-pin PNL_PWR1)

(see p. 5, No. 20)



Setting	Description
1-2	+3V (Default)
2-3	+5V
4-5	+12V

Use this to set up the VDD power of the LVDS connector.

Brightness Control Mode

(3-pin BLT_PWM1)

(see p. 5, No. 23)

Setting	Description
1-2	From eDP PWM to CON_LBKLT_CTL
2-3	From LVDS PWM to CON_LBKLT_CTL (Default)

Please set to 1-2 when adjusting brightness by Brightness Control bar under OS.
Please set to 2-3 when adjusting brightness by BLT_VOL1.

Brightness Control Voltage Mode

(3-pin BLT_PWM2)

(see p. 5, No. 24)

Setting	Description
1-2	+3V (Default)
2-3	+5V

Backlight Power Select (LCD_BLT_VCC)

(3-pin BKT_PWR1)

(see p. 5, No. 27)

Setting	Description
1-2	LCD_BLT_VCC : +5V (Default)
2-3	LCD_BLT_VCC : +12V

Use this header to set up the backlight power of the LVDS connector and the panel backlight power of BLT_PWM1.

Clear CMOS Header

(3-pin CLRMOS1)

(see p. 5, No. 28)

Setting	Description
1-2	Normal (Default)
2-3	Clear CMOS

NOTE: CLRMOS1 allows you to clear the data in CMOS. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short pin2 and pin3 on CLRMOS1 for 5 seconds. However, please do not clear the CMOS right after you update the BIOS. If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action. Please be noted that the password, date, and time will be cleared only if the CMOS battery is removed.

Digital Input/Output Power Select

(3-pin JGPIO_SET1)

(see p. 5, No. 38)

Setting	Description
1-2	+5V (Default)
2-3	GND

The header is used for GPIO default value setting for either pull high or pull low. Pulling the header to a high/low value means the voltage is anchored to VCC/GND, in a stable, non-floating state.

ATX/AT Mode Jumper

(2-pin SIO_AT1)

(see p. 5, No. 39)

Setting	Description
Open	ATX Mode (Default)
Short	AT Mode

Digital Input/Output Power Select (JGPIOPWR)

(5-pin JGPIO_PWR1)

(see p. 5, No. 41)



Setting	Description
1-2	+12V
2-3	+5V (Default)
3-4	+5V
4-5	GND

The maximum current JGPIO_PWR1 provides is 1A.

Chassis Intrusion Headers

(2-pin CI1)

(see p. 5, No. 42)

Setting	Description
Open	Normal (Default)
Short	Active Case Open

(2-pin CI2)

(see p. 5, No. 42)

Setting	Description
Open	Active Case Open
Short	Normal (Default)

This motherboard supports CASE OPEN detection feature that detects if the chassis cover has been removed. This feature requires a chassis with chassis intrusion detection design.

DACC Jumper

(2-pin DACC1)

(see p. 5, No. 43)

Setting	Description
Open	No ACC
Short	ACC (Default)

Auto clear CMOS when system boot improperly.

PWR_BAT1

(2-pin PWR_BAT1)

(see p. 5, No. 46)

Setting	Description
Open	Normal (Default)
Short	Charge Battery*

*Only supported by chargeable battery.

2.6 Onboard Headers and Connectors

Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard!

LAN LED Headers

(4-pin LAN1_LED1 (For LAN1 Port)
(see p. 5, No. 2)

(4-pin LAN2_LED1 (For LAN2 Port))
(see p. 5, No. 47)



Pin	Signal Name
1	LILEDP
2	LED_LNK#_ACT
3	LED_1000#
4	LED_2500#

Chassis FAN Connector (+12V)

(4-pin CHA_FAN1)
(see p. 5, No. 3)



Pin	Signal Name
1	GND
2	+12V
3	CHA_FAN_SPEED
4	FAN_SPEED_CONTROL

(4-pin CHA_FAN3)
(see p. 5, No. 5)



(4-pin CHA_FAN2)
(see p. 5, No. 33)



The board offers three 4-pin chassis fan (Smart Fan) connectors which are compatible with 3-pin chassis fan. If you connect a 3-pin chassis fan to the chassis fan connector on this motherboard, please connect it to pin 1-3. The maximum current is 1A.

8-Pin ATX 12V Power Connector

(8-pin ATX12V1)
(see p. 5, No. 4)



Pin	Signal Name	Signal Name	Pin
1	GND	ATX12V	2
3	GND	ATX12V	4
5	GND	ATX12V	6
7	GND	ATX12V	8

This motherboard provides an 8-pin ATX 12V power connector. To use a 4-pin ATX power supply, please plug it along Pin 1 and Pin 5.

CPU FAN Connector (+12V)

(4-pin CPU_FAN1)

(see p. 5, No. 7)



Pin	Signal Name
1	GND
2	+12V
3	CPU_FAN_SPEED
4	FAN_SPEED_CONTROL

The board offers three 4-pin CPU fan (Smart Fan) connectors which are compatible with 3-pin CPU fan. If you connect a 3-pin CPU fan to the CPU fan connector on this motherboard, please connect it to pin 1-3. The maximum current is 1A.

PSU_SMB1

(5-pin PSU_SMB1)

(see p. 5, No. 11)

Pin	Signal Name
1	SMB_CLK
2	SMB_DATA
3	SMBALERT#
4	GND
5	+3V

24-pin ATX Power Input Connector

(24-pin ATXPWR1)

(see p. 5, No. 12)



Pin	Signal Name	Signal Name	Pin
1	+3V	+3V	13
2	+3V	-12V	14
3	GND	GND	15
4	+5V	PSON#	16
5	GND	GND	17
6	+5V	GND	18
7	GND	GND	19
8	PWROK_PS	NA	20
9	ATX+5VSB	+5V	21
10	+12V	+5V	22
11	+12V	+5V	23
12	+3V	GND	24

This motherboard provides a 24-pin ATX power connector. To use a 20-pin ATX power supply, please plug it along Pin 1 and Pin 13.

System Panel Header

(9-pin PANEL1)

(see p. 5, No. 14)



Pin	Signal Name	Signal Name	Pin
1	HDLED+	PLED+	2
3	HDLED-	PLED-	4
5	GND	PWRBTN#	6
7	RESET#	GND	8
9	GND		10

This header accommodates several system front panel functions.

Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments below. Note the positive and negative pins before connecting the cables.

PWRBTN (Power Switch):
Connect to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch.
RESET (Reset Switch):
Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.
PLED (System Power LED):
Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED keeps blinking when the sys-tem is in S1 sleep state. The LED is off when the system is in S3/S4 sleep state or powered off (S5).
HDLED (Hard Drive Activity LED):
Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assign-ments are matched correctly.

COM Port Headers

(9-pin COM5, COM6 (RS232))
(see p. 5, No. 15)

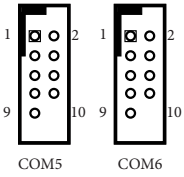

Pin	Signal Name	Signal Name	Pin
1	DDCD#	RRXD	2
3	TTXD	DDTR#	4
5	GND	DDSR#	6
7	RRTS#	CCTS#	8
9	PWR		10

(9-pin COM2 (RS232/422/485)*
COM3, COM4 (RS232))
(see p. 5, No. 34)



There are five 2.54mm-pitch COM port headers (COM2~COM5), with COM3~COM6 only supporting RS-232, and with COM2 supporting RS232/422/485. The maximum current is 1A per port. The power supply of pin 9 is either 5V or 12V; use the COM Port Pin 9 PWR Setting Jumper to control it.

** This motherboard supports RS232/422/485 on COM2 port. Please refer to the table below for the pin definition. In addition, COM2 port (RS232/422/485) can be adjusted in BIOS setup utility > Advanced Screen > Super IO Configuration. You may refer to our user manual for details.*

COM2 Port Pin Definition

Pin	RS232	RS422	RS485
1	DCD	TX-	RTX-
2	RXD	TX+	RTX+
3	TXD	RX+	N/A
4	DTR	RX-	N/A
5	GND	GND	GND
6	DSR	N/A	N/A
7	RTS	N/A	N/A
8	CTS	N/A	N/A
9	PWR	PWR	PWR

USB 3.2 Gen2 Connectors (Type-A)

(9-pin USB3_10)

(see p. 5, No. 16)



USB3_10

(9-pin USB3_5)

(see p. 5, No. 17)



USB3_5

Pin	Signal Name
1	USB_PWR
2	USB_D-
3	USB_D+
4	GND
5	SSRX-
6	SSRX+
7	GND
8	SSTX-
9	SSTX+

The board provides two internal USB 3.2 Gen2 headers, which are Type-A vertical connectors. The maximum current per port is 0.5A.

LVDS Panel Connector

(40-pin LVDS1)

(see p. 5, No. 19)



Pin	Signal Name	Signal Name	Pin
1	LCD_VCC	LCD_VCC	2
3	+3.3V	N/A	4
5	N/A	LVDS_A_DATA0#	6
7	LVDS_A_DATA0	PD (Panel Detection)	8
9	LVDS_A_DATA1#	LVDS_A_DATA1	10
11	GND	LVDS_A_DATA2#	12
13	LVDS_A_DATA2	GND	14
15	LVDS_A_DATA3#	LVDS_A_DATA3	16
17	GND	LVDS_A_CLK#	18
19	LVDS_A_CLK	GND	20
21	LVDS_B_DATA0#	LVDS_B_DATA0	22
23	GND	LVDS_B_DATA1#	24
25	LVDS_B_DATA1	GND	26
27	LVDS_B_DATA2#	LVDS_B_DATA2	28
29	DPLVDD_EN	LVDS_B_DATA3#	30
31	LVDS_B_DATA3	GND	32
33	LVDS_B_CLK#	LVDS_B_CLK	34
35	GND	CON_LBKLT_EN	36
37	CON_LBKLT_CTL	LCD_BLT_VCC	38
39	LCD_BLT_VCC	LCD_BLT_VCC	40

* PD (Panel Detection): Connect this pin to LVDS Panel's Ground pin to detect Panel detection.

Inverter Power Control Wafer

(6-pin BLT_PWR1)

(see p. 5, No. 21)



Pin	Signal Name
1	GND
2	GND
3	CON_LBKLT_CTL
4	CON_LBKLT_EN
5	LCD_BLT_VCC
6	LCD_BLT_VCC

Backlight Volume Control

(7-pin BLT_VOL1)

(see p. 5, No. 22)

Pin	Signal Name
1	GPIO_VOL_UP
2	GPIO_VOL_DW
3	PWRDN
4	BLT_UP
5	BLT_DW
6	GND
7	GND

SATA3 Connectors

(7-pin SATA3_4, SATA3_5)

(see p. 5, No. 25)

(7-pin SATA3_6, SATA3_7)

(see p. 5, No. 26)

(7-pin SATA3_0~SATA3_3)

(see p. 5, No. 29)

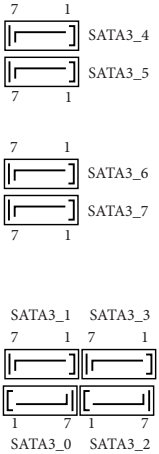

Pin	Signal Name
1	GND
2	SATA-A+
3	SATA-A-
4	GND
5	SATA-B-
6	SATA-B+
7	GND

The Serial ATA3 (SATA3) connector supports SATA data cables for internal storage devices. The current SATA3 interface allows up to 6.0 Gb/s data transfer rate.

ESPI Header

(20-pin ESPI1)

(see p. 5, No. 30)

Pin	Signal Name	Signal Name	Pin
1	GND	ESPI_IO0	11
2	ESPI_CLK	ESPI_IO1	12
3	GND	ESPI_IO2	13
4	ESPI_CS#	ESPI_IO3	14
5	ESPI_RESET#	ALERT#1	15
6	GND	+3VSB	16
7	+3V	Internal use	17
8	ESPI_CS#1	+5VSB	18
9	PLTRST#	ESPI_ALERT#	19
10	COM_RST#	GND	20

Thunderbolt AIC Connector

(5-pin TB1)

(see p. 5, No. 31)



Pin	Signal Name
1	TB_FRC_PWR
2	TBCIO_PLUG_EVENT_R2
3	SLP_S3#
4	TBT_SLP_S5_S4#
5	GND

Please connect a Thunderbolt™ add-in card (AIC) to the Thunderbolt AIC connector via the General-purpose I/O(GPIO) cable.

USB 2.0 Header

(9-pin USB2_12_13)

(see p. 5, No. 32)



Pin	Signal Name	Signal Name	Pin
1	USB_PWR	USB_PWR	2
3	P-	P-	4
5	P+	P+	6
7	GND	GND	8
9		DUMMY	10

The board provides one internal USB 2.0 header, and the connector can support two USB 2.0 ports. The maximum current per port is 0.5A.

Printer Port/GPIO Header

(25-pin LPT_GPIO1)

(see p. 5, No. 36)



Printer Port

Pin	Signal Name	Signal Name	Pin
1	STB#	AFD#	2
3	SPD0	ERROR#	4
5	SPD1	PINIT#	6
7	SPD2	SLIN#	8
9	SPD3	GND	10
11	SPD4	GND	12
13	SPD5	GND	14
15	SPD6	GND	16
17	SPD7	GND	18
19	ACK#	GND	20
21	BUSY	GND	22
23	PE	GND	24
25	SLCT		

GPIO

Pin	Signal Name	Signal Name	Pin
1	GPIO77	GPIO76	2
3	GPIO80	GPIO75	4
5	GPIO81	GPIO74	6
7	GPIO82	GPIO73	8
9	GPIO83	JGPIOPWR	10
11	GPIO84	JGPIOPWR	12
13	GPIO85	GND	14
15	GPIO86	GND	16
17	GPIO87	GND	18
19	GPIO72	GND	20
21	GPIO71	GND	22
23	GPIO70	GND	24
25	NC		

Parameter	Range
GPIO input Low voltage	Max: 0.8V
GPIO input High voltage	Min: 2.5V
GPIO output Low voltage	Max: 0.4V
GPIO output High voltage	Min: 2.85V
Note: Max. load per GPI/O pin: 3mA Current Max. 1A per power pin	

The header functions as printer port and GPIO. To use the printer port function, please short pin4 and pin5 on Digital Input/Output Power Select (JGPIO_PWR1). This motherboard provides two SMI GPIO pins for interruption and two Timed GPIO pins for time synchronization purpose.
Pin 1-8 on GPIO are used for Input control while Pins 9, 11, 13, 15, 17, 19, 21 and 23 are used for Output control.

Buzzer Header

(2-pin BUZZ2)

(see p. 5, No. 37)

Pin	Signal Name
1	+5V
2	BUZZ

This header provides additional external Buzzer for boot up debugging.

PS/2 Keyboard/Mouse Header

(8-pin PS2_KB_MS1)

(see p. 5, No. 40)



Pin	Signal Name	Signal Name	Pin
1	KBCLK	+5V	2
3	KBDATA	+5V	4
5	MSDATA	GND	6
7	MSCLK	GND	8

SPDIF Header

(4-pin SPDIF1)

(see p. 5, No. 44)



Pin	Signal Name
1	+5V
2	
3	SPDIF OUT
4	GND

SPDIF header, providing SPDIF audio output to HDMI VGA card, allows the system to connect HDMI Digital TV/projector/LCD devices. Please connect the SPDIF connector of HDMI VGA card to this header.

HEATER Header

(3-pin HEATER1)

(see p. 5, No. 45)

Pin	Signal Name
1	Heater PWR
2	GND
3	NCT

* The 10k Ohm NTC thermistors is suggested.
* Deep mode is not supported when the preheat function is enabled.

Refer to the following Preheat Targer Temperature list.

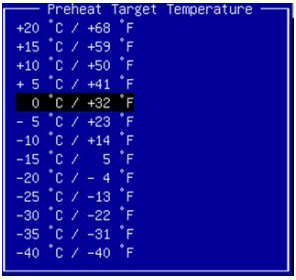

Front Panel Audio Header

(9-pin HD_AUDIO1)

(see p. 5, No. 48)



Pin	Signal Name	Signal Name	Pin
1	MIC2_L	GND	2
3	MIC2_R		4
5	OUT2_R	MIC_RET	6
7	J_SENSE		8
9	OUT2_L	OUT_RET	10

3W Audio Output Wafer

(4-pin SPEAKER1)

(see p. 5, No. 49)



Pin	Signal Name
1	OUTLN
2	OUTLP
3	OUTRP
4	OUTRN

Chapter 3 UEFI SETUP UTILITY

3.1 Introduction

ASRock Industrial UEFI (Unified Extensible Firmware Interface) is a BIOS utility which offers tweak-friendly options in an advanced viewing interface. The UEFI system works with a USB mouse and offers users a faster, sleeker experience.

This BIOS utility can perform the Power-On Self-Test (POST) during system startup, record hardware parameters of the system, load operating system, and so on. The battery on the motherboard supplies the power needed to the CMOS when the system power is turned off, and the values configured in the UEFI utility are kept in the CMOS.

Please note that inadequate BIOS settings may cause system instability, mulfunction or boot failure. We strongly recommend that you do not alter the UEFI default configurations or change the settings only with the assistance of a trained service person.

If the system becomes unstable or fails to boot after you change the setting, try to clear the CMOS values and reset the board to default values. See your motherboard manual for instructions.

3.1.1 Entering BIOS Setup

You may run the UEFI SETUP UTILITY by pressing <F2> or <Delete> right after you power on the computer; otherwise, the Power-On-Self-Test (POST) will continue with its test routines. If you wish to enter the UEFI SETUP UTILITY after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.

This setup guide explains how to use the UEFI SETUP UTILITY to configure all the supported system. The screenshots in this manual are for reference only. UEFI Settings and options may vary owing to different BIOS release versions or CPU installed. Please refer to the actual BIOS version of the motherboard you purchased for detailed screens, settings and options.

3.1.2 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Main	For setting system time/date information
Advanced	For advanced system configurations
H/W Monitor	Displays current hardware status
Security	For security settings
Boot	For configuring boot settings and boot priority
Exit	Exit the current screen or the UEFI Setup Utility

Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions for reference purpose only, and may vary from the latest BIOS and do not exactly match what you see on your screen.

3.1.3 Navigation Keys

Use <←> key or <→> key to choose among the selections on the menu bar, and use <↑> key or <↓> key to move the cursor up or down to select items, then press <Enter> to get into the sub screen. You can also use the mouse to click your required item.

Please check the following table for the descriptions of each navigation key.

Navigation Key(s)	Description
+ / -	To change option for the selected items
<Tab>	Switch to next function
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen

3.2 Main Screen

When you enter the UEFI SETUP UTILITY, the Main screen will appear and display the system overview.

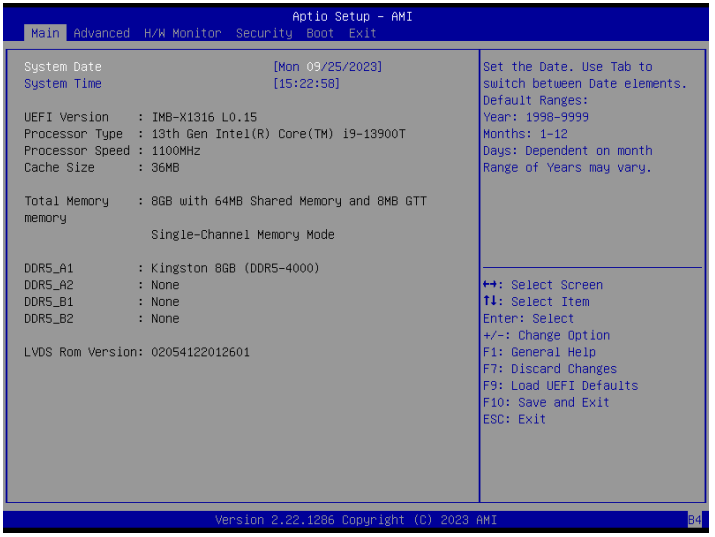

Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen. Options may also vary depending on the features of your motherboard.

3.3 Advanced Screen

In this section, you may set the configurations for the following items: CPU Configuration, Chipset Configuration, Storage Configuration, Super IO Configuration, AMT Configuration, ACPI Configuration, USB Configuration, Trusted Computing, and Thunderbolt (TM) Configuration.

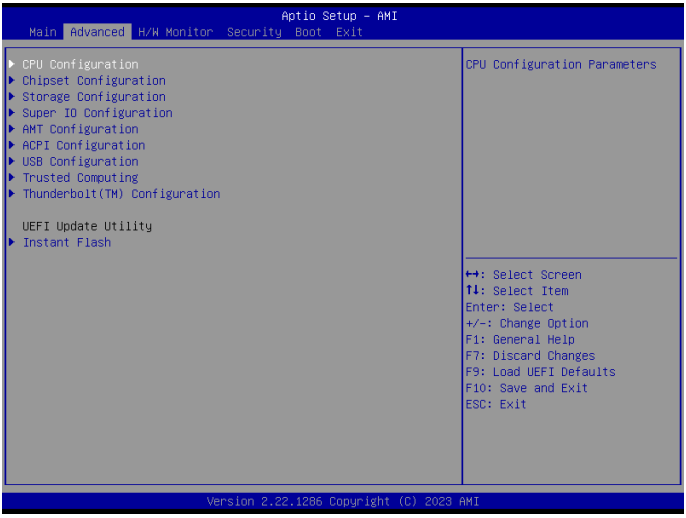

Setting wrong values in this section may cause the system to malfunction.

Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows you to update system UEFI without entering operating systems first like Windows®. Just launch this tool and save the new UEFI file to your USB flash drive, floppy disk or hard drive, and then you can update your UEFI in only a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. If you execute Instant Flash utility, the utility will show the UEFI files and their respective information. Select the proper UEFI file to update your UEFI, and reboot your system after UEFI update process completes.

3.3.1 CPU Configuration

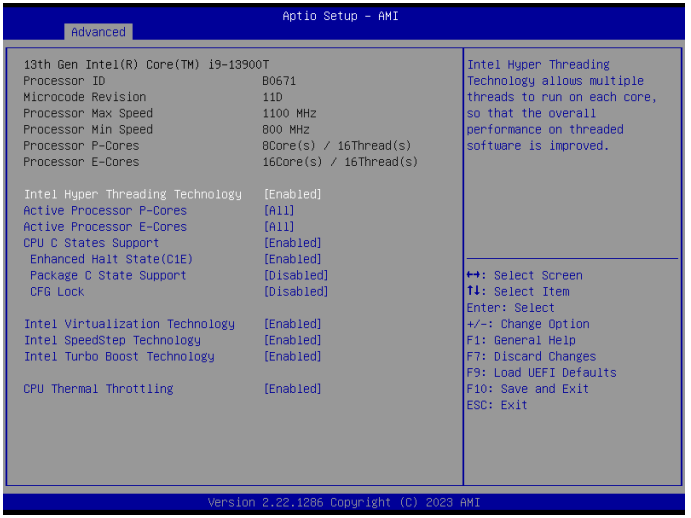

Intel Hyper Threading Technology

Intel Hyper Threading Technology allows multiple threads to run on each core, so that the overall performance on threaded software is improved.

Configuration options: [Enabled] [Disabled]

Active Processor P-Cores

This allows you to select the number of cores to enable in each processor package.

Active Processor E-Cores

Allows you to select the number of E-Cores to enable in each processor package. Note: Number of P-Cores and E-Cores are looked at together. When both are {0,0}, Pcode will enable all cores.

CPU C States Support

Allows you to enable CPU C States Support for power saving. It is recommended to keep C3, C6 and C7 all enabled for better power saving.

Configuration options: [Enabled] [Disabled]

Enhanced Halt State (C1E)

The option allows you to enable Enhanced Halt State (C1E) for lower power consumption.

Configuration options: [Enabled] [Disabled]

CPU C States Support

This allows you to enable CPU C States Support for power saving. It is recommended to keep C3, C6 and C7 all enabled for better power saving.

Configuration options: [Enabled] [Disabled]

CFG Lock

The option allows you to enable or disable the CFG Lock.

Configuration options: [Enabled] [Disabled]

Intel Virtualization Technology

Intel Virtualization Technology allows a platform to run multiple operating systems and applications in independent partitions, so that one computer system can function as multiple virtual systems.

Configuration options: [Enabled] [Disabled]

Intel SpeedStep Technology

Intel SpeedStep technology allows processors to switch between multiple frequencies and voltage points for better power saving and heat dissipation. CPU turbo ratio can be fixed when Intel SpeedStep Technology is set to [Disabled].

Configuration options: [Enabled] [Disabled].

If you install Windows® 10 and want to enable this function, please set this item to [Enabled]. This item will be hidden if the current CPU does not support Intel SpeedStep technology.

Please note that enabling this function may reduce CPU voltage and lead to system stability or compatibility issues with some power supplies. Please set this item to [Disabled] if above issues occur.

Intel Turbo Boost Technology

Intel Turbo Boost Technology enables the processor to run above its base operating frequency when the operating system requests the highest performance state. The default value is [Enabled].

Configuration options: [Enabled] [Disabled]

CPU Thermal Throttling

CPU Thermal Throttling allows you to enable CPU internal thermal control mechanisms to keep the CPU from overheating.

Configuration options: [Enabled] [Disabled]

3.3.2 Chipset Configuration

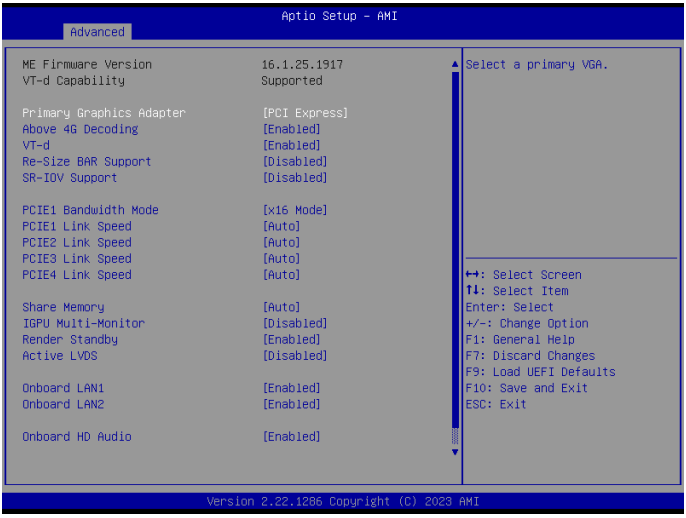

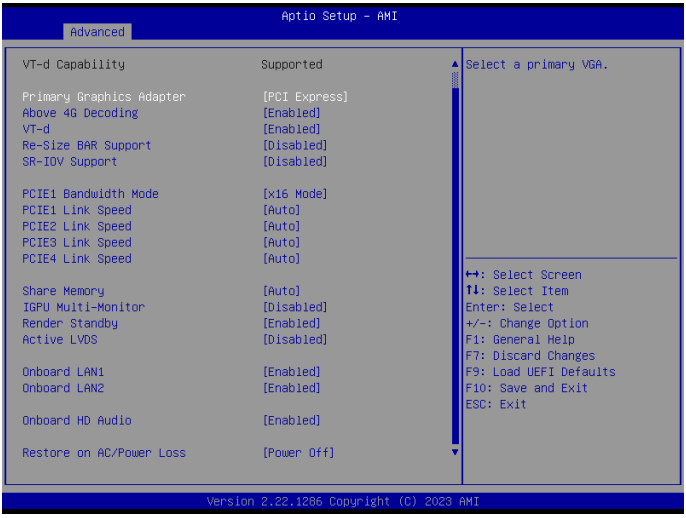

Primary Graphics Adapter

The option allows you to select a primary VGA.

Configuration options: [Onboard] [PCI Express] (Options vary when you have installed a graphics card on your motherboard.)

Above 4G Decoding

The option allows you to enable or disable above 4G Memory Mapped IO decoding. This is disabled automatically when Aperture Size is set to 2048MB.

Configuration options: [Enabled] [Disabled]

VT-d

Intel® Virtualization Technology for Directed I/O helps your virtual machine monitor better utilize hardware by improving application compatibility and reliability, and providing additional levels of manageability, security, isolation, and I/O performance.

Configuration options: [Enabled] [Disabled]

Re-Size BAR Support

If system has Resizable BAR capable PCIe Devices, this option enables or disables Resizable BAR Support.

SR-IOV Support

If system has SR-IOV capable PCIe Devices, this option Enables or Disables Single Root IO

Virtualization Support.

Configuration options: [Enabled] [Disabled]

PCIE1 Bandwidth Mode

Select PCIE1 Bandwidth. Select [PCIE4] when using PCIE4 slot. Select [x8 / x8 Mode]

when using Riser card on PCIE1 slot. (PCIE4 slot will be disabled)

PCIE1 Link Speed

The option allows you to configure PCIE1 Slot Link Speed. Auto mode is optimizing for overclocking.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] [Gen4] [Gen5] (Options vary depending on your motherboard.)

PCIE2 Link Speed

The option allows you to configure PCIE2 Slot Link Speed. Auto mode is optimizing for overclocking.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] (Options vary depending on your motherboard.)

PCIE3 Link Speed

The option allows you to configure PCIE3 Slot Link Speed. Auto mode is optimizing for overclocking.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] (Options vary depending on your motherboard.)

PCIE4 Link Speed

The option allows you to configure PCIE4 Slot Link Speed. Auto mode is optimizing for overclocking.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] (Options vary depending on your motherboard.)

Share Memory

Share memory allows you to configure the size of memory that is allocated to the integrated graphics processor when the system boots up.

Configuration options: [Auto] [32M] [64M] [128M] [256M] [512M] [1024M] Options vary depending on the memory you use on your motherboard.

IGPU Multi-Monitor

Select [Disabled] to disable the integrated graphics when an external graphics card is

installed. Select [Enabled] to keep the integrated graphics enabled at all times.

Configuration options: [Auto] [Enabled] [Disabled]

Render Standby

Power down the render unit when the GPU is idle for lower power consumption.

Active LVDS

Use this to enable or disable the LVDS. The default value is [Disabled]. Set the item to [Enabled]. Then press <F10> to save the setting and restart the system. Now the default value of Active LVDS is changed to [Enabled] (F9 load default is also set to [Enabled]).

Change the setting from [Enabled] to [Disabled], and then press <F10> to save the setting and restart the system. Likewise, the default value of Active LVDS is changed to [Disabled] (F9 load default is also set to [Disabled]).

Onboard LAN1

This allows you to enable or disable the Onboard LAN1 feature.

Onboard LAN2

This allows you to enable or disable the Onboard LAN2 feature.

Onboard HD Audio

Onboard HD Audio allows you to enable or disable the onboard HD audio controller. Set this item to [Auto] to enable the onboard HD and automatically disable it when a sound card is installed.

Configuration options: [Auto] [Enabled] [Disabled]

Restore on AC/Power Loss

Allows you to select the power state after a power failure.

[Power Off] sets the power to remain off when the power recovers.

[Power On] sets the system to start to boot up when the power recovers.

3.3.3 Storage Configuration

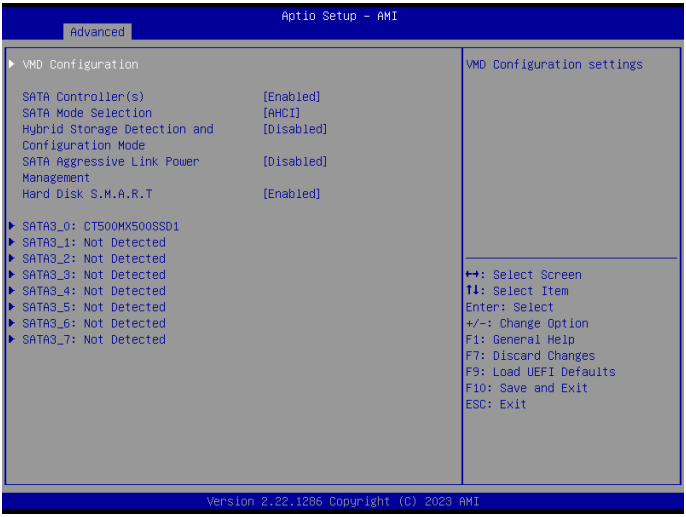

SATA Controller(s)

Allows you to enable or disable the SATA controllers.

Configuration options: [Enabled] [Disabled]

SATA Mode Selection

AHCI: Supports new features that improve performance.

Configuration option: [AHCI]

Hybrid Storage Detection and Configuration Mode

Hybrid Storage Detection and Configuration Mode allows you to select Hybrid Storage Detection and Configuration Mode.

Configuration options: [Dynamic Configuration for Hybrid Storage Enable] [Disabled]

SATA Aggressive Link Power Management

SATA Aggressive Link Power Management allows SATA devices to enter a low power state during periods of inactivity to save power. It is supported only by AHCI mode.

Configuration options: [Enabled] [Disabled]

Hard Disk S.M.A.R.T.

S.M.A.R.T stands for Self-Monitoring, Analysis, and Reporting Technology. It is a monitoring system for computer hard disk drives to detect and report on various indicators of reliability.

Configuration options: [Enabled] [Disabled]

3.3.4 Super IO Configuration

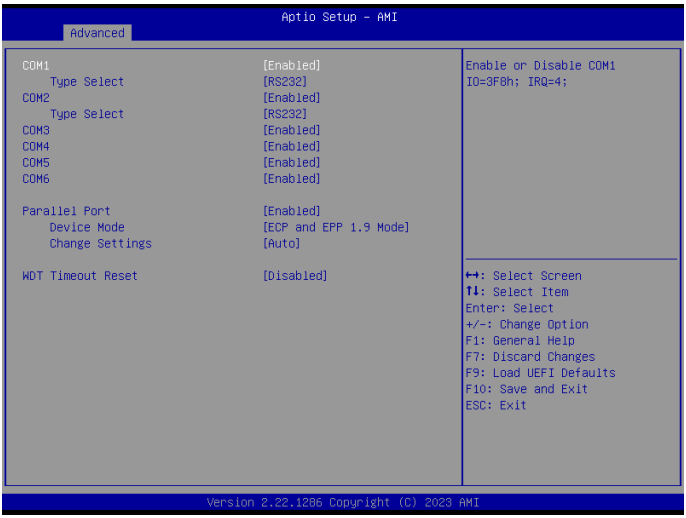

COM1 Configuration

Use this to set parameters of COM1.

Type Select

Use this to select COM1 port type: [RS232], [RS422] or [RS485].

COM2 Configuration

Use this to set parameters of COM2.

Type Select

Use this to select COM2 port type: [RS232], [RS422] or [RS485].

COM3 Configuration

Use this to set parameters of COM3.

COM4 Configuration

Use this to set parameters of COM4.

COM5 Configuration

Use this to set parameters of COM5.

COM6 Configuration

Use this to set parameters of COM6.

Parellel Port

The option enables or disables the Parallel port.

Device Mode

Select the device mode according to your connected device.

Change Settings

Select the address of the Parallel port.

WDT Timeout Reset

Use this to set the Watch Dog Timer.

3.3.5 AMT Configuration

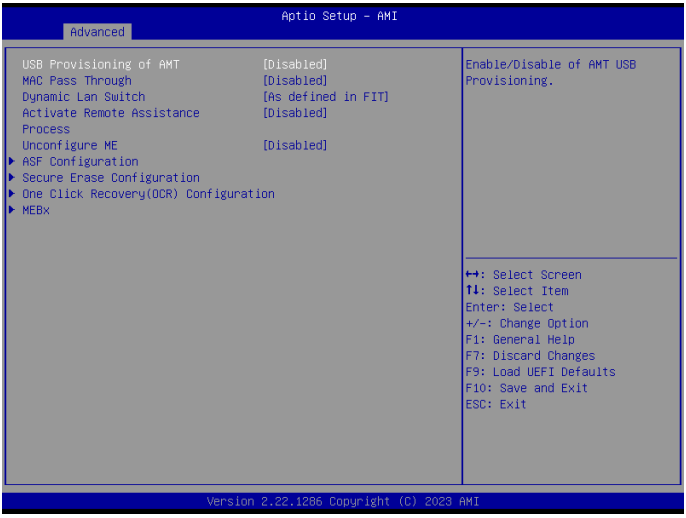

USB Provisioning of AMT

Use this to enable or disable AMT USB Provisioning. The default is [Disabled].

MAC Pass Through

The option enables or disables MAC Pass Through function.

Dynamic Lan Switch

The option allows switching AMT support from Integrated LAN to Discrete LAN.

Activate Remote Assistance Process

Trigger CIRA boot. The default is [Disabled].

Un-Configure ME

Un-Configure ME without password. The default is [Disabled].

ASF Configuration

The option allows you to configure Alert Standard Format parameters.

Secure Erase Configuration

Secure Erase configuration menu

One Click Recovery(OCR) Configuration

Configuration setting for One Click Recovery. This allows access for AMT to boot a recovery OS application

MEBx

This Formset contains forms for configuring MEBx.

3.3.6 ACPI Configuration

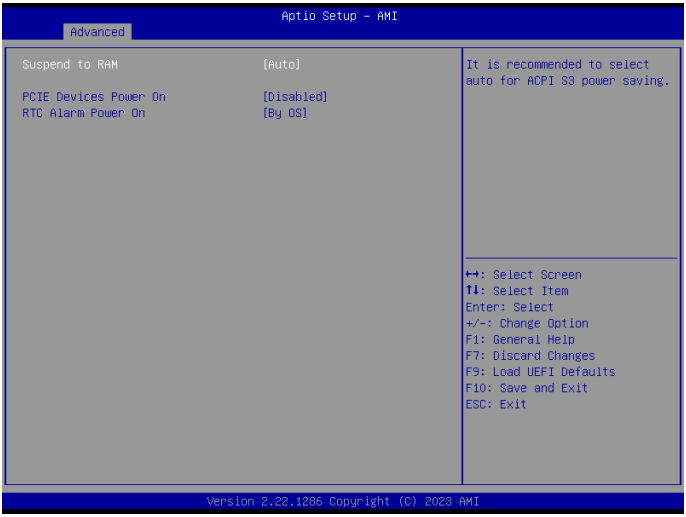

Suspend to RAM

Suspend to RAM allows you to select [Disabled] for ACPI suspend type S1. It is recommended to select [Auto] for ACPI S3 power saving.

Configuration options: [Auto] [Disabled]

PCIE Devices Power On

Use this item to enable or disable PCIE devices to turn on the system from the power-soft-off mode.

RTC Alarm Power On

RTC Alarm Power On allows the system to be waked up by the real time clock alarm. Set it to By OS to let it be handled by your operating system.

Configuration options: [Enabled] [Disabled] [By OS]

3.3.7 USB Configuration

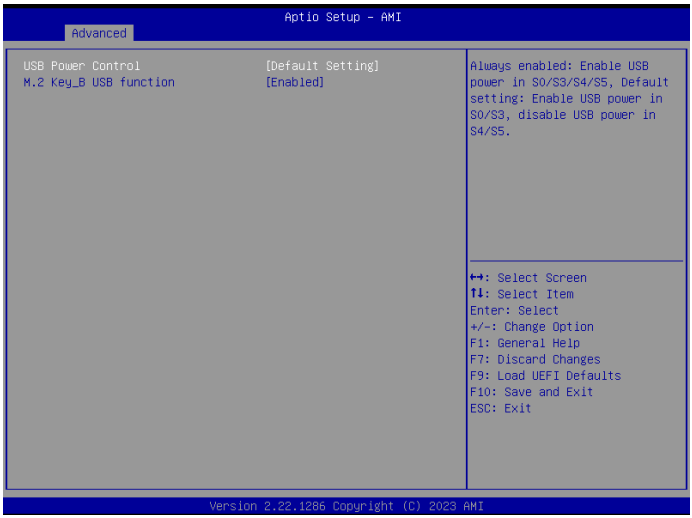

USB Power Control

Use this option to control USB power.

M.2 Key_B USB Function

The item enables or disables M.2 Key_B USB function.

3.3.8 Trusted Computing

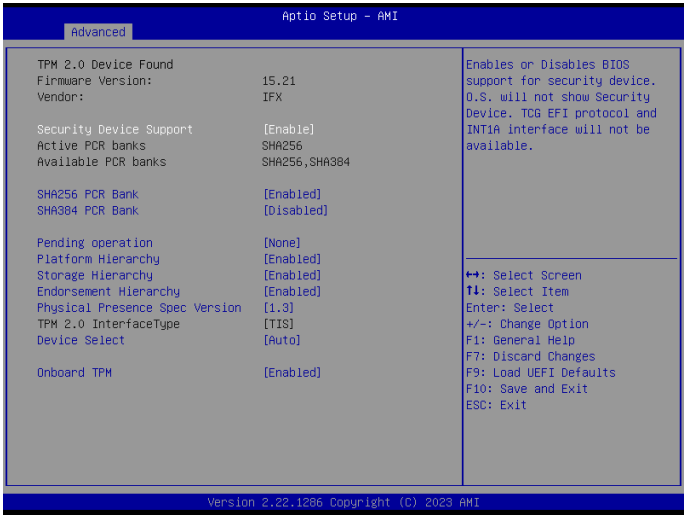

NOTE: Options vary depending on the version of your connected TPM module.

Security Device Support

Security Device Support allows you to enable or disable BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

Configuration options: [Enabled] [Disabled]

Active PCR banks

This item displays active PCR Banks.

Available PCR Banks

This item displays available PCR Banks.

SHA256 PCR Bank

SHA256 PCR Bank allows you to enable or disable SHA256 PCR Bank.

Configuration options: [Enabled] [Disabled]

SHA384 PCR Bank

SHA384 PCR Bank allows you to enable or disable SHA384 PCR Bank.

Configuration options: [Enabled] [Disabled]

Pending Operation

Pending Operation allows you to schedule an Operation for the Security Device.

NOTE: Your computer will reboot during restart in order to change State of the Device.

Configuration options: [None] [TPM Clear]

Platform Hierarchy

This item allows you to enable or disable Platform Hierarchy.

Configuration options: [Enabled] [Disabled]

Storage Hierarchy

This item allows you to enable or disable Storage Hierarchy.

Configuration options: [Enabled] [Disabled]

Endorsement Hierarchy

This item allows you to enable or disable Endorsement Hierarchy.

Configuration options: [Enabled] [Disabled]

Physical Presence Spec Version

Select this item to tell OS to support PPI spec version 1.2 or 1.3. Please note that some HCK tests might not support version 1.3.

Configuration options: [1.2] [1.3]

TPM 2.0 InterfaceType

This item allows you to view the Communication Interface to TPM 2.0 Device: CRB or ITS.

Device Select

This item allows you to select the TPM device to be supported.

[TPM 1.2] restricts support to TPM 1.2 devices.

[TPM 2.0] restricts support to TPM 2.0 devices.

[Auto] supports both TPM 1.2 and TPM 2.0 devices with the default set to TPM 2.0 devices. If TPM 2.0 devices are not found, TPM 1.2 devices will be enumerated.

Onboard TPM

Enable/disable Intel PTT in ME. Disable this option to use discrete TPM Module.

3.3.9 Thunderbolt (TM) Configuration

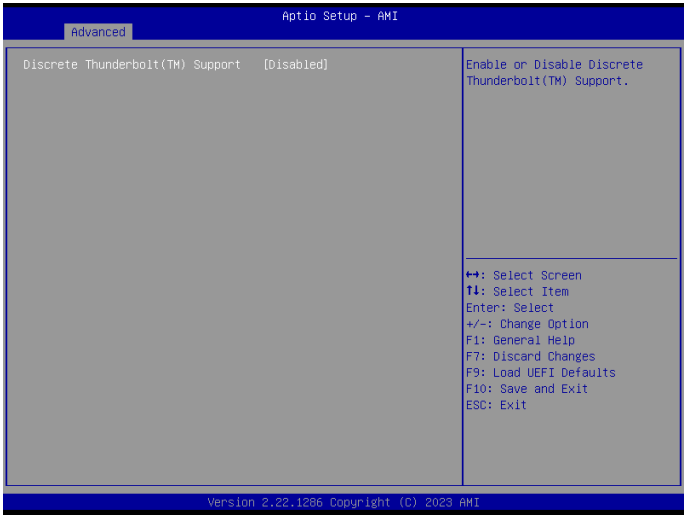

Discrete Thunderbolt(TM) Support

This item enables or disables the Discrete Thunderbolt(TM) Support.

3.4 Hardware Health Event Monitoring Screen

This section allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed and the critical voltage.

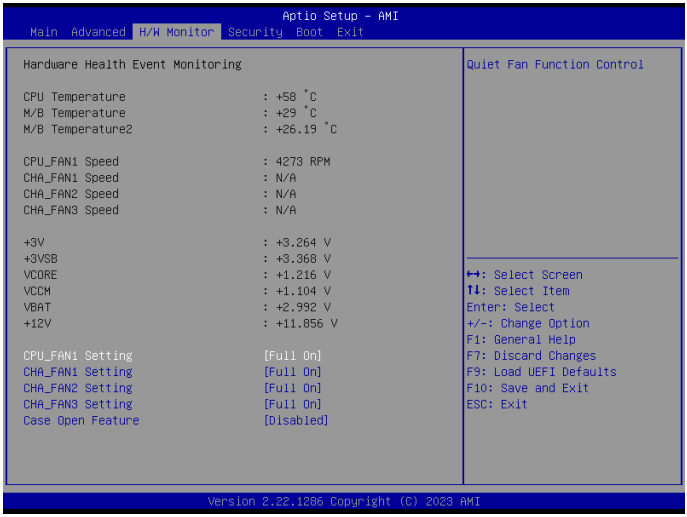

NOTE: Options vary depending on the features of your motherboard.

CPU_Fan 1 Setting

This item allows you to select a fan mode for CPU Fan 1. The default value is [Full On].

Configuration options: [Full On] [Automatic Mode]

CHA_Fan 1 Setting

This allows you to set chassis fan 1's speed. The default value is [Full On].

Configuration options: [Full On] [Automatic Mode]

CHA_Fan 2 Setting

This allows you to set chassis fan 2's speed. The default value is [Full On].

Configuration options: [Full On] [Automatic Mode]

CHA_Fan 3 Setting

This allows you to set chassis fan 3's speed. The default value is [Full On].

Configuration options: [Full On] [Automatic Mode]

Case Open Feature

This item allows you to enable or disable case open detection feature. The default is value [Disabled].

Clear Status

This option appears only when the case open has been detected. Use this option to keep or clear the record of previous chassis intrusion status.

3.5 Security Screen

In this section you may set or change the supervisor/user password for the system. You may also clear the user password.

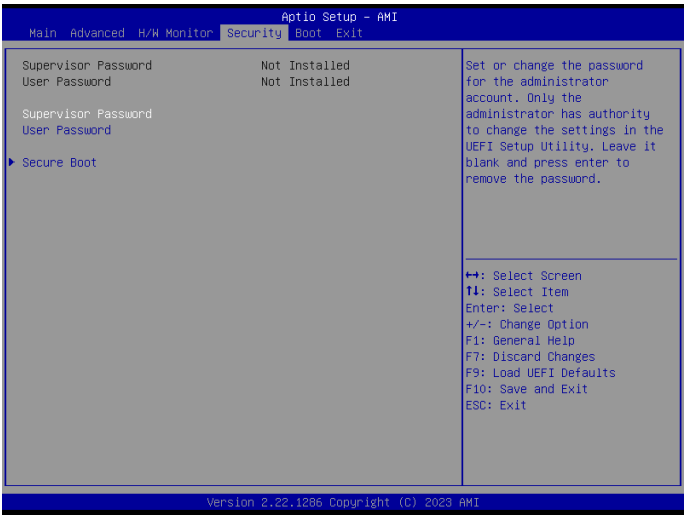

Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

User Password

Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

Secure Boot

Press [Enter] to configure the Secure Boot Settings. The feature protects the system from unauthorized access and malwares during POST.

3.6 Boot Screen

This section displays the available devices on your system for you to configure the boot settings and the boot priority.

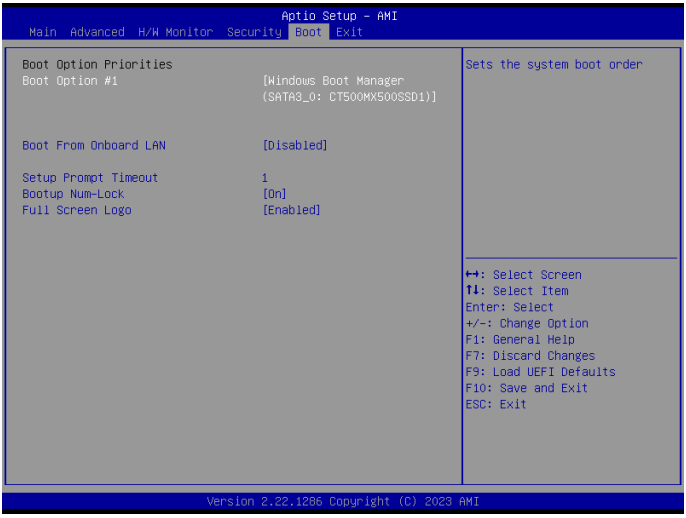

Boot From Onboard LAN

The item allows the system to be waked up by the onboard LAN.

Configuration options: [Enabled] [Disabled]

Setup Prompt Timeout

The item allows you to configures the number of seconds to wait for the UEFI setup utility.

Configuration options: [1] - [65535]

Bootup Num-Lock

The item allows you to select whether Num Lock should be turned on or off when the system boots up.

Configuration options: [On] [Off]

Full Screen Logo

[Enabled] Select this item to display the boot logo.

[Disabled] Select this item to show normal POST messages.

3.7 Exit Screen

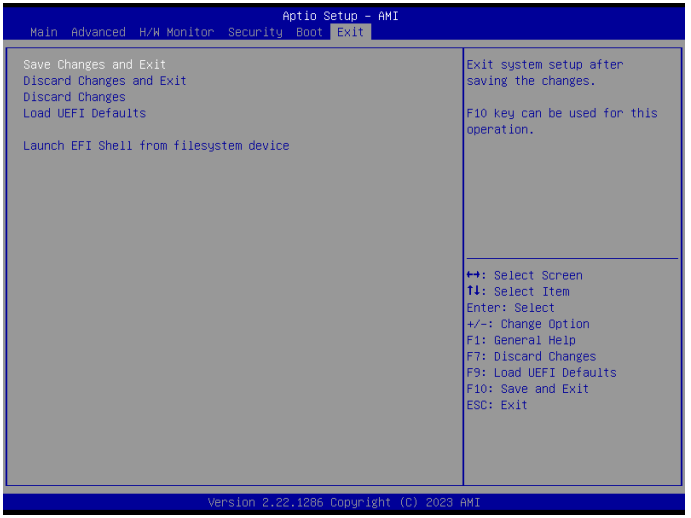

Save Changes and Exit

When you select this option, the following message “Save configuration changes and exit setup?” will pop out. Press <F10> key or select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

Discard Changes and Exit

When you select this option, the following message “Discard changes and exit setup?” will pop out. Press <ESC> key or select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.

Discard Changes

When you select this option, the following message “Discard changes?” will pop out. Press <F7> key or select [Yes] to discard all changes.

Load UEFI Defaults

Allows you to load UEFI default values for all options. The F9 key can be used for this operation.

Launch EFI Shell from filesystem device

The item allows you to copy shellx64.efi to the root directory to launch EFI Shell.